


COOLING ONLY • CONSTANT AIR VOLUME, NORMALLY OPEN DAMPER • PRESSURE INDEPENDENT

Sequence of Operation:

1. When main control air is off, damper is fully open. Morning warm-up setting (if required) with warm air from the system supplied at full flow rate.
2. Main control air on - controller is activated. Maintains preset constant air volume regardless of duct pressure or room temperature.
3. A room thermostat is not used.
4. If main control air fails, damper fails open.

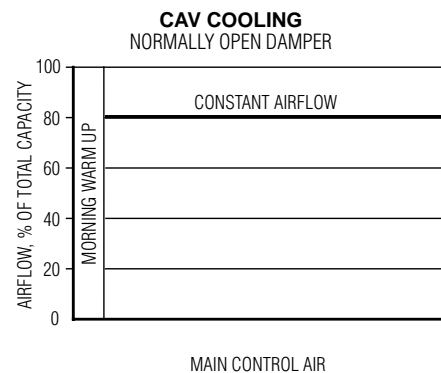

SCHEDULE TYPE:				
PROJECT:				
ENGINEER:				
CONTRACTOR:				
DATE	B SERIES	SUPERSEDES	DRAWING NO.	
23 - 4 - 01	3000	NEW	3000CD-8P3	