


## **EZSTAT DIGITAL CONTROLS**

FAN COIL UNITS WITH EPIC ECM

MODEL SERIES: 35FH, 37FH AND 39 (TYPE ZE)

**CONTROL SEQUENCE: N503 (2-PIPE)** 

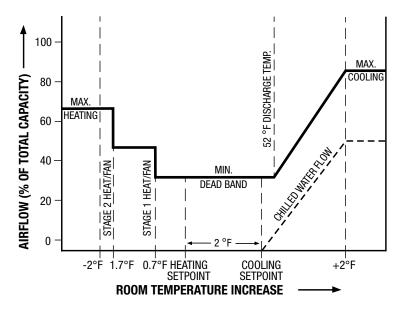

# N503 BACnet DIGITAL THERMOSTAT 7-DAY PROGRAMMABLE SCHEDULE VARIABLE AIR VOLUME, MODULATING COOLING WITH STAGED ELECTRIC HEAT • 2-PIPE SYSTEM

## **Discharge Air Temperature**

The Discharge Air Temperature sensor (DAT) provides the controller with the coil leaving air temperature (LAT). This is used to control the modulating valve, to achieve a pre-set, but adjustable, discharge temperature. On cooling, this controls humidity.

## **SEQUENCE OF OPERATION:**

## **Modulating Cooling**

On a call for cooling, the chilled water valve will begin to modulate open. The valve will continue to open until the discharge air temperature reaches 52°F (11°C). Simultaneously, the fan will modulate from minimum airflow to maximum airflow to achieve room set point. Upon a decrease in cooling demand, the sequence will reverse.

### **Deadband**

With no demand in the space, there will be no call for heating or cooling. The fan will be at a deadband set minimum airflow. The chilled water valve will be off. The hot water valve and electric heat relay will be off.

#### **Staged Electric Heat**

On a call for heating, the water valve is closed. The fan will step up to the stage 1 fan airflow setting and the first stage of electric heat will energize to achieve room set point. Units with electric heat may have an optional second stage available. Upon an increased call for heat, the fan will step up to the stage 2 fan airflow setting and the second stage of heat will energize. On a decrease in heating demand, the sequence will reverse.

#### Notes:

- EZstat is factory programmed for the specific sequence of operation.
- 2. EZstat is also factory calibrated when airflow settings are provided for easy start-up.
- 3. Field commissioning (password protected):
  - a. Max. and Min. airflow settings are field adjustable between the ranges on the unit's ECM fan curve calibration chart.
  - b. Deadband differential and other parameters are also adjustable.
  - c. Refer to EZstat Application Guide/IOM.
- Remote mounted 24 VAC thermostat is field wired (by others). Refer to application specific wiring diagram.
- 5. Thermostats baseplate mounts to a standard 2" (51) x 4" (102) vertical handy box.







SCHEDULE TYPE:	Dimension are in inches (mm).			
PROJECT:	Dimension are in inches (min).			
ENGINEER:	DATE	B SERIES	SUPERSEDES	DRAWING NO.
CONTRACTOR:	9 - 23 - 14	FCS	NEW	FCS-N503