



INSTALLATION AND OPERATION INSTRUCTIONS POSITION INDICATOR PACKAGE FOR COMBINATION FIRE / SMOKE AND SMOKE DAMPERS MODEL: MLS-300. For use with GGD221/121 (electric) and 331-2961/3060 (pneumatic) actuators

APPLICATION:

- The MLS-300 Position Indicator Package operates as a function of the damper blade position and provides the ability to remotely indicate damper blade position.
- · The MLS-300 incorporates two SPDT switches and provides a positive open or closed signal when used in conjunction with remote indicator lights. MLS-300's are used in active smoke control management systems to positively indicate the status of all combination fire/smoke and smoke dampers in the building.
- The MLS-300 is available only as a factory installed option on combination fire / smoke and smoke dampers.

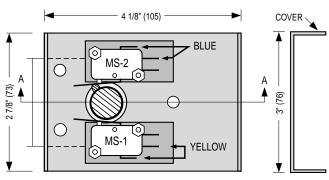


EXTERNAL RIGHT HAND MOUNTING: FRONT VIEW (LESS COVER)

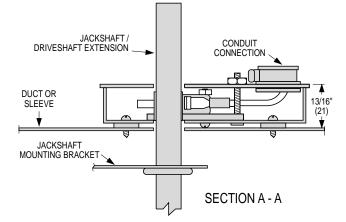


Position Indicator Microswitch Data:


Switch Type: Single Pole double throw (2) 15 Amps, 1/3 HP, 125, 250 Vac or 24 Vdc. 1/2 Amp, 125 Vdc. 1/4 Amp, 250 Vdc.

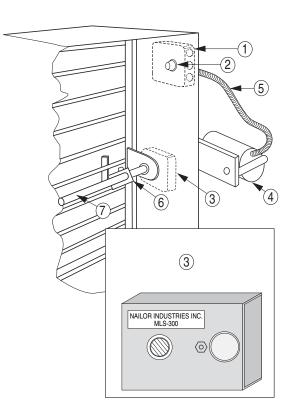

Typical Combination Fire / Smoke Damper Installation With UL Listed Actuator **Description:**

 - 1. Electrical Junction Box. [and EP switch with pneumatic actuator(s)]
- 2. ERL 165, 212, 250, 350 Electric Resettable Link (Heat Sensor)
- 3. MLS-300 Position indicator package
- 4. Actuator (pneumatic illustrated).
- 5. Silicone Tubing or Flexible Conduit
- 6. Over-Center Knee Lock
- 7. Jackshaft

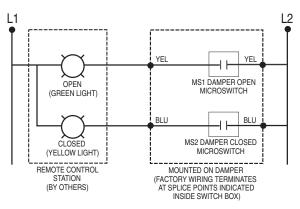



Dimensions are in inches (mm).

IOM-MLS3N

Page 1 of 2

8/07

Page 2.102

Nailor Industries Inc. reserves the right to change any information concerning product or specification without notice or obligation.

Electrical Connections:

 Remove cover of junction box. There are four or six coded color wires. Four wires are the MLS-300 position indicator package. If six wires are present, the additional two are the field connection for either an electric actuator or an EP switch for a pneumatic actuator.

MS1 is damper open signal.

MS2 is damper closed signal.

Important: Installer must double check continuity of **MS1** and **MS2** before wiring to confirm which switch signals the damper's open or closed position.

- 2. Connect external wiring and electrical power supply (120 or 24 Vac) in accordance with N.E.C. and any applicable local codes.
- 3. Replace junction box cover and check operation.

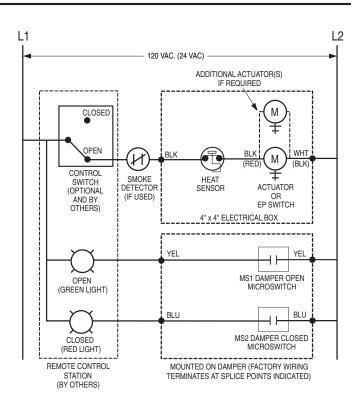


Figure 2. Combination Fire/Smoke Damper Wiring Schematic.

Dimensions are in inches (mm).



Houston, Texas Tel: 281-590-1172 Fax: 281-590-3086 Las Vegas, Nevada Tel: 702-648-5400 Fax: 702-638-0400 **Toronto, Canada** Tel: 416-744-3300 Fax: 416-744-3360 **Calgary, Canada** Tel: 403-279-8619 Fax: 403-279-5035

IOM-MLS3N

Page 2 of 2

Page 2.103

"Complete Air Control and Distribution Solutions."

www.nailor.com

8/07